

## Installation Information

Radio Interface for 26-Pin Accessory Port Connector


No programming required.

Jumper Pin 6 to Pin 13 on 26 Pin Accessory connector to enable external speaker.


The internal speaker cannot be used in this configuration.

An external speaker must be used if cabin audio is required.

## **RC-xxHA Cable**

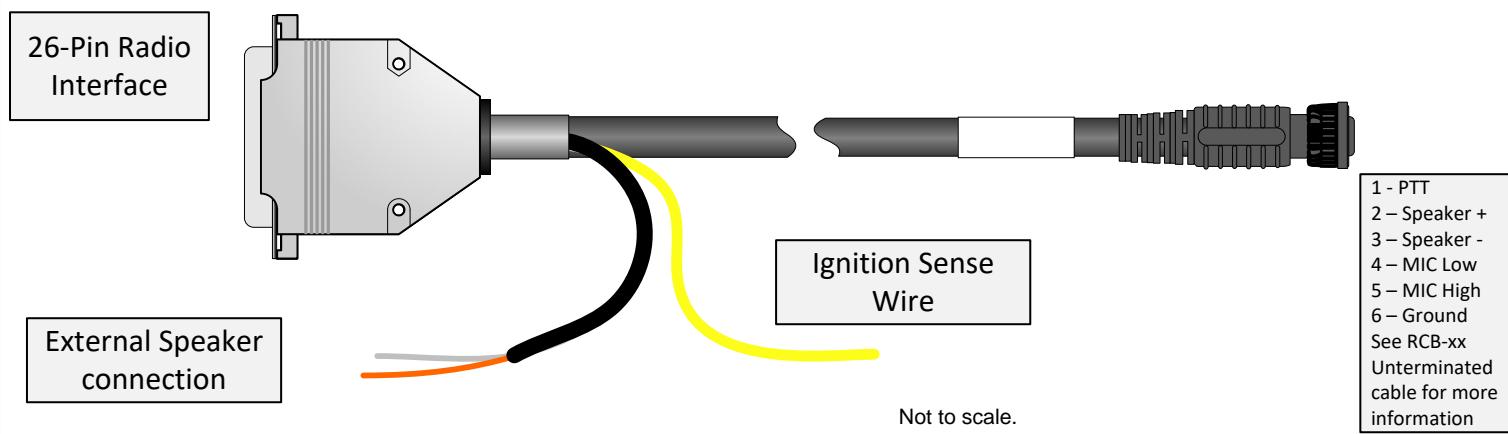

## Rear View

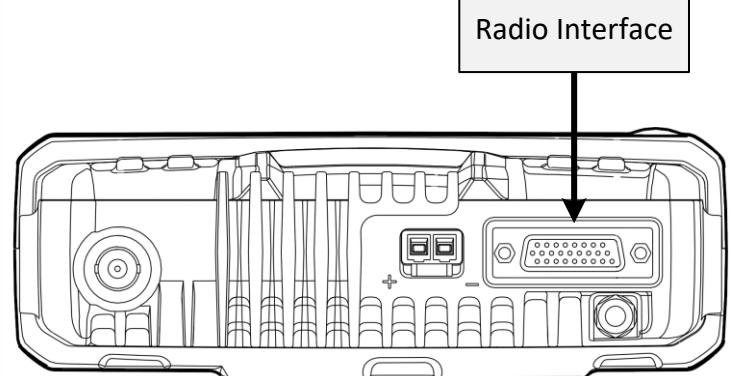

## 26-Pin Accessory Connector

Front View

