

Installation Information

Radio Interface for 20-Pin Accessory Port Connectors on the RF Deck.

16- Pin radio Interface connector must be centered on 20-Pin Accessory connector port. The outer two pins on either side are not used.


PTT may need to be programmed on Pin 3 of accessory interface port of radio.

External Speaker connections.

If an external speaker is not required, insulate external speaker wires with heat-shrink tubing.


RC-xxM10-1 Version Includes An Additional Flying Lead for Ignition Sense

RC-xxM10 Cable

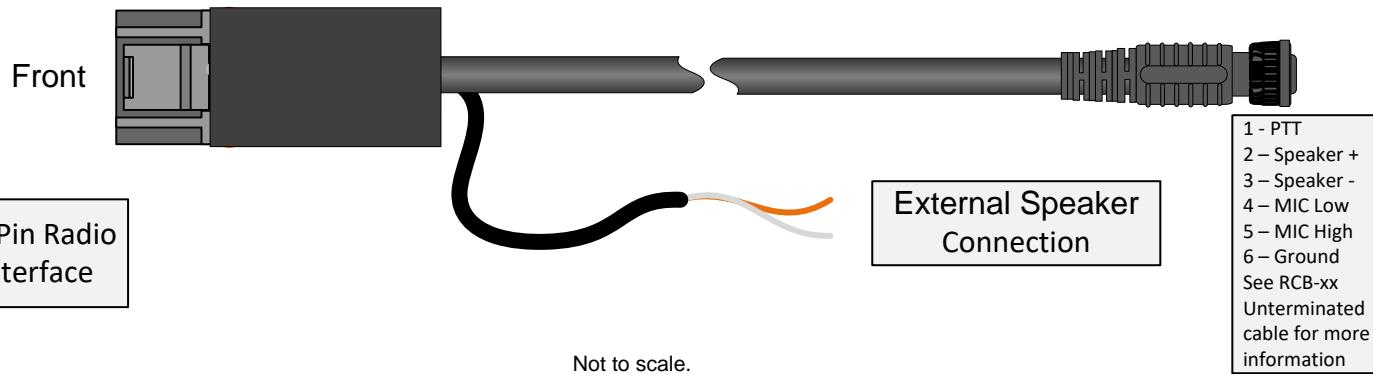

Back View

CDM 750

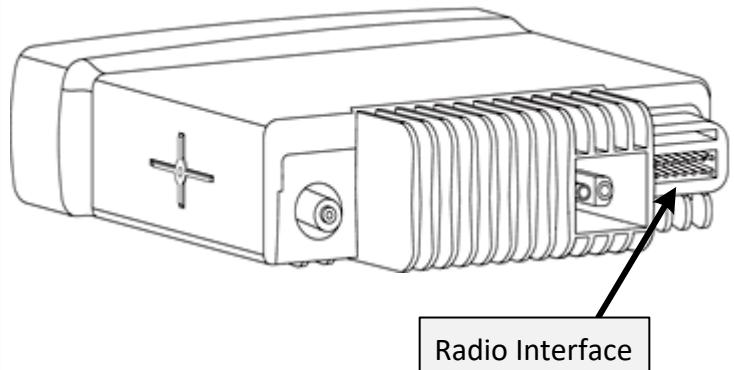

Front View

16-pin connector

