

Installation Information

Requires KCT-60 option cable from Kenwood (Refer to Model specific service manual for KCT-60 installation as well as programming for Rx/Tx)

For RX audio, you must assign one of the keys as "External Speaker", using the programming software.


PTT must be assigned to FNC1 in programming.

When using KPG-135D PTT is assigned via Port 1 >DB15 pin 6, referring to Pin 6 of the DB-15 accy port which relates to pin 9 of the 15 pin Molex.

May require KMC35/36 Hot Mic modification if using handmic. KMC-65 does not require the modification.


Radio Modifications to Change Mic Input from Digital to Analog		
Radio Model	Remove	Add
TK-7360, TK-8360	100KΩ from R806	10KΩ to R806
TK-7302, TK-8302	100KΩ from R743	10KΩ to R743
NX-720, NX-820, NX-920	R797 0Ω jumper	R799 0Ω jumper
TK-D740, TK-D840, NX-840	R737 0Ω jumper	R735 0Ω jumper
NX-3720, NX-3820, NX-3920, NX-3921	R659 0Ω jumper	R601 0Ω jumper
NX-740	R761 0Ω jumper	R767 0Ω jumper
NX-1700 / NX-1800 - No modifications required for current production.		

RCB-xxKX Cable

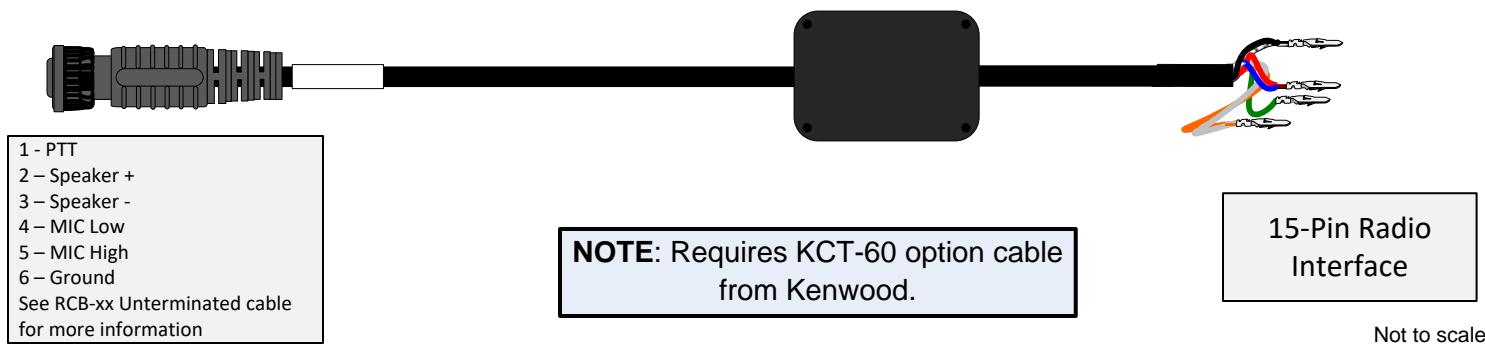

Rear View

Radio

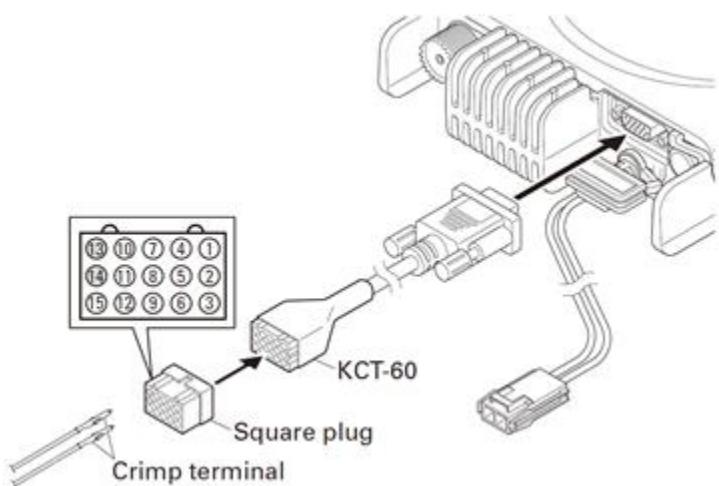

Square Plug Connector

Rear View

