Setcom

CORPORATION

www.setcomcorp.com

3019 Alvin DeVane Blvd.
Ste. 560
Austin, TX 78741
Phone: (650) 965-8020

Setcom GTK Radio Cable
XL-185M, XL-200M

Installation Information

For L3Harris XL-185M, XL200M (GTK).

Direct Connect to CH or VCH (HD44).

Program and install radio* - INP2 as EXT PTT
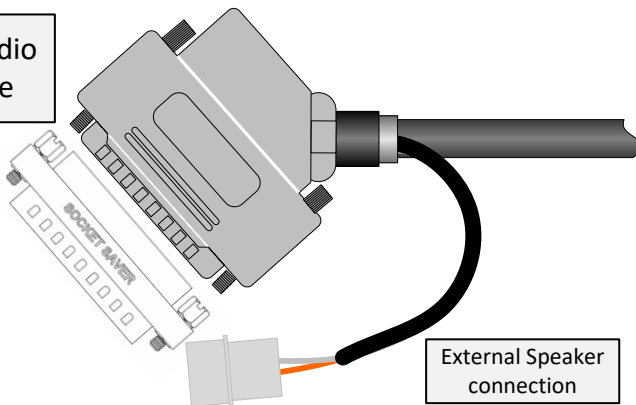
Install socket saver device, Setcom PN: 11-9044
Use a flat bladed screwdriver or 3/16" Hex driver fully secure adapter to radio port

Connect the radio cable to the socket saver.

Connect external cabin speaker to 2-pin connector.
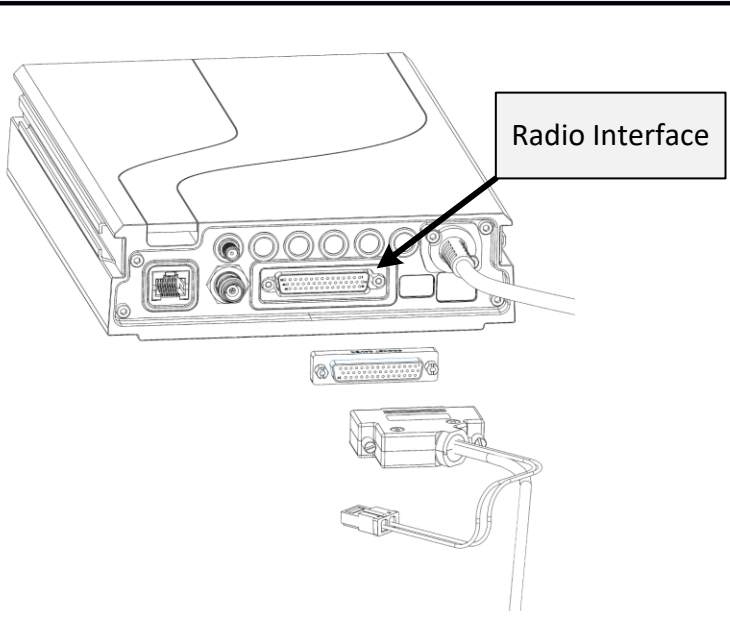
RC-xxGTK Cable

44-Pin Radio Interface

External Speaker connection

Not to scale.

1 - PTT
2 – Speaker +
3 – Speaker -
4 – MIC Low
5 – MIC High
6 – Ground
See RCB-xx
Unterminated cable for more information

Rear View
Harris XL-185M

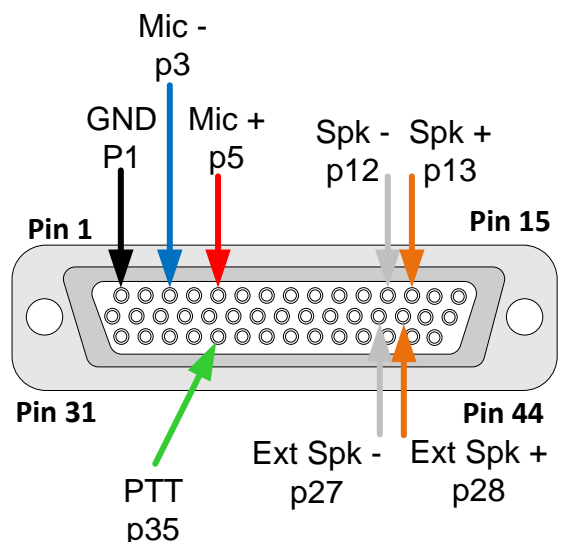Radio Interface

44-Pin Accessory Connector
Front View

Mic - p3

GND P1   Mic + p5

Spk - p12   Spk + p13

Pin 1   Pin 15

Pin 31   Pin 44

PTT p35   Ext Spk - p27   Ext Spk + p28

Note: p9,18,21,26 are also GND